



ť

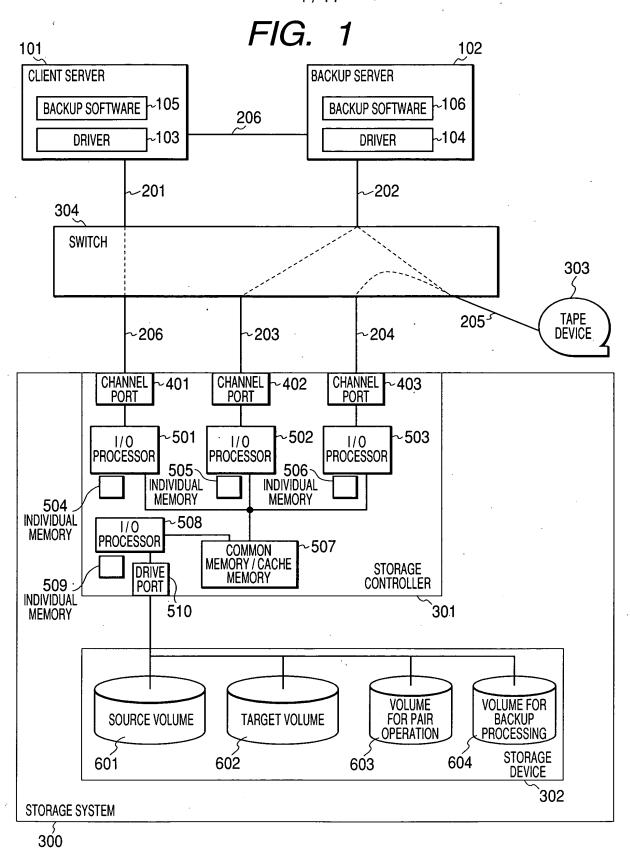

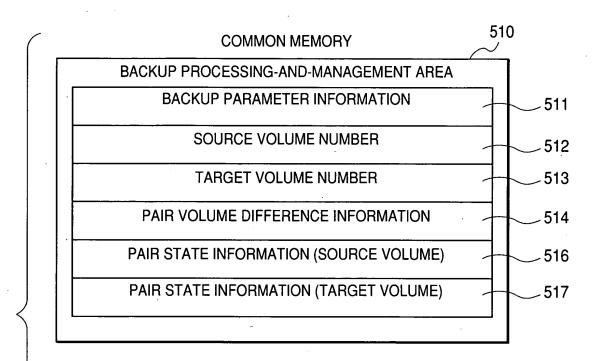


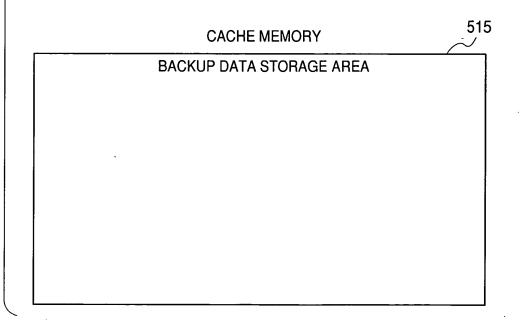


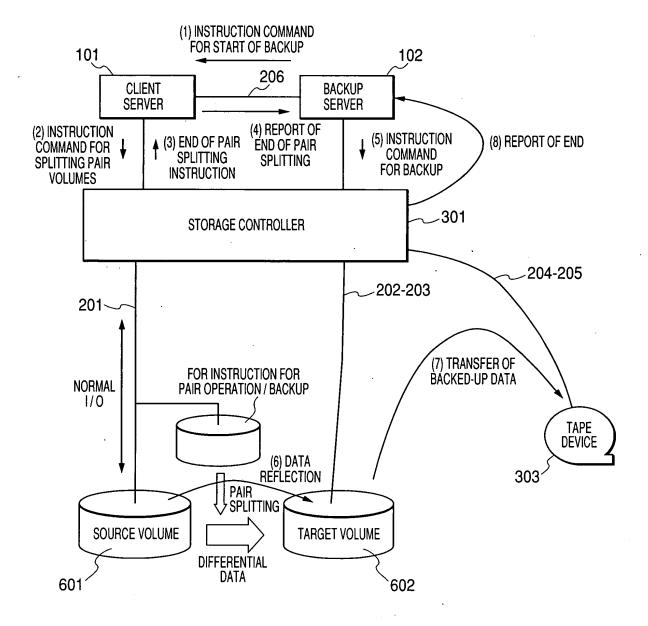



SERVER		STORAGE CONTROLLER (301)		
CLIENT (101)	BACKUP (102)	PROCESSOR (501)	PROCESSOR (502)	PROCESSOR (503)
	BACKUP (102)  • (1) INSTRUCTION COMMAND FOR START OF BACKUP  • (5) INSTRUCTION COMMAND FOR BACKUP	<del>                                       </del>	<del>, `                                   </del>	• CHECK PAIRED STATE • CHECK BACKED-UP DATA
	• END OF BACKUP		_• (8) REPORT OF END	→ (6) WHEN DATA IS NOT REFLECTED FROM SOURCE VOLUME 601 TO TARGET VOLUME 602, DATA ABOUT RANGE TO BE BACKED UP IS REFLECTED FROM SOURCE VOLUME TO TARGET VOLUME • (7) TRANSFER BACKED-UP DATA TO TAPE DEVICE 303 • REPORT OF END
	PROCESSING			

₹\

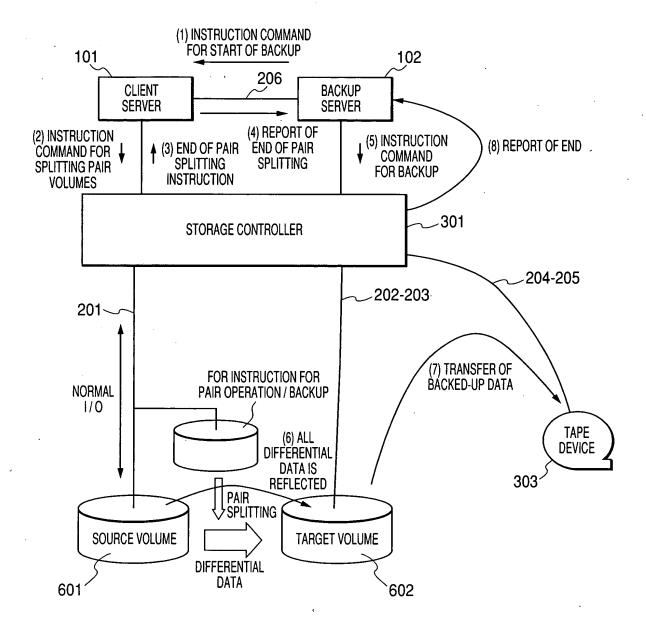

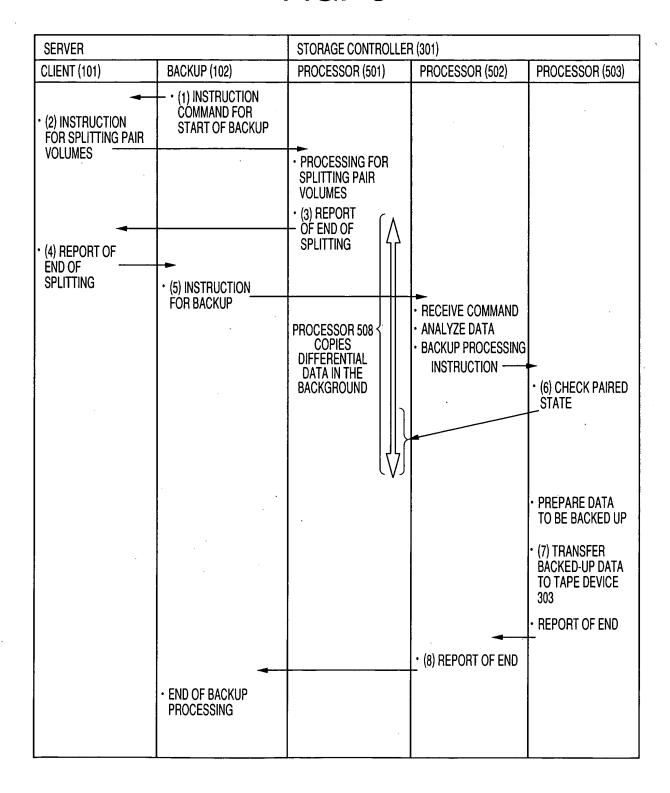

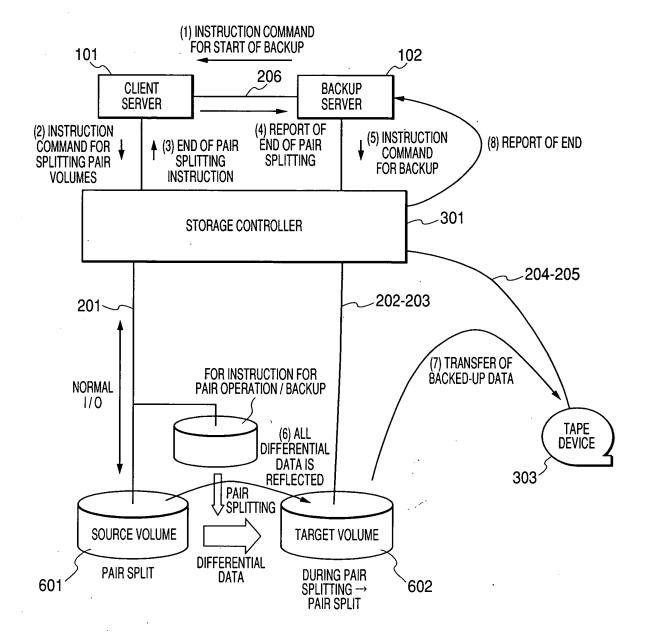

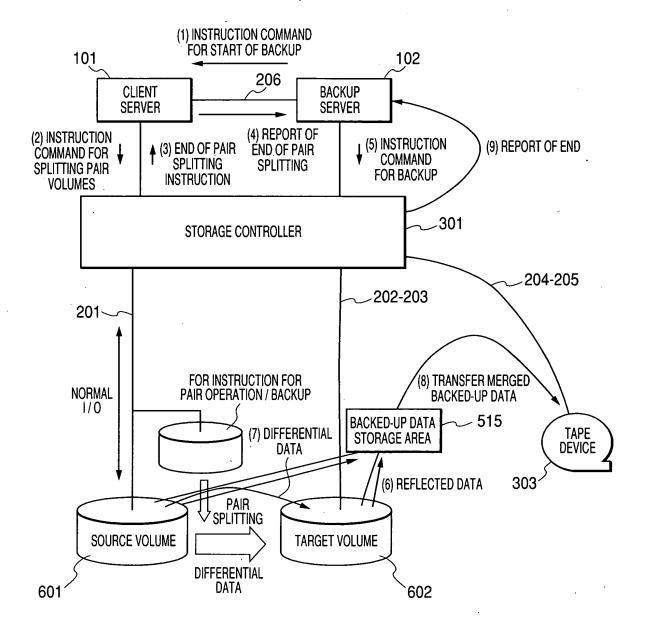

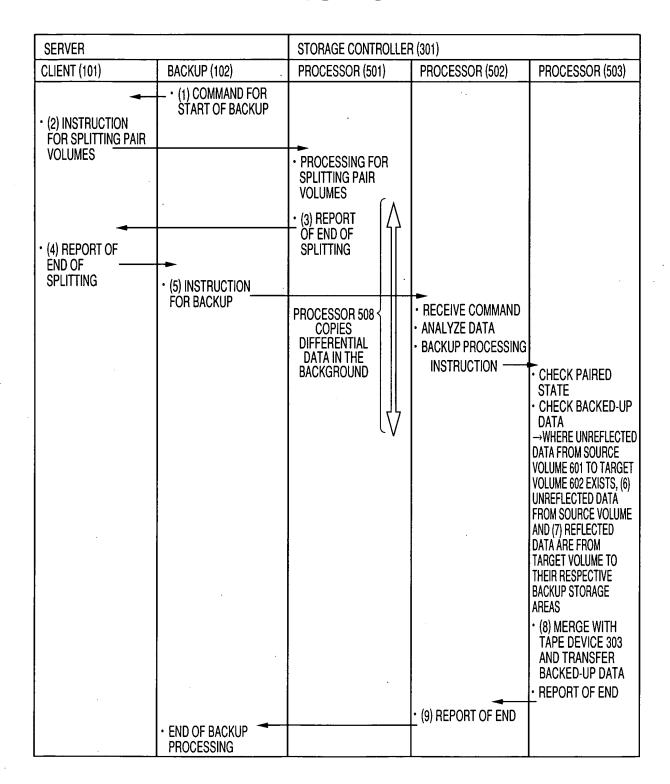


FIG. 10

